

## CLASSIC JOYPAD CONVERTER for(PC-Engine)



### **Slow Motion:**

If hold down *L2* button and then press *RUN* button, the Slow motion function will enable,  
If hold down *L1* button and then press *RUN* button, the Slow motion function will disable.

### **2 Level Turbo Fire:**

*Turbo I* button is first level auto-fire *I*, *Turbo II* button is first level auto-fire *II*,  
when hold down *R2* button and then press *Turbo I* button is second level auto-fire of button *I*,  
when hold down *R2* button and then press *Turbo II* button is second level auto-fire of button *II*.