

CLASSIC JOYPAD CONVERTER for(NEO-GEO)



Slow Motion:

Hold *FunctionB* button and press SELECT button, then Slow motion function will be enable.
Hold *FunctionA* button and press SELECT button, then Slow motion function will be disable.

Level 1 Auto Fire:

Hold down *Turbo B* button and press PAD A, B, C or D button.

Level 2 Auto Fire:

Hold down *Turbo A* button and press PAD A, B, C or D button.

Only V2 Joypad Converter Support Following Function :

Enable Level 1 Auto Fire on Single Button:

Hold *FunctionB* button and *Turbo B* button, then press PAD A, B, C or D button.

Enable Level 2 Auto Fire on Single Button:

Hold *FunctionB* button and *Turbo A* button, then press PAD A, B, C or D button.

Disable Auto Fire on Single Button:

Hold *FunctionA* button, then press PAD A, B, C or D button.

Disable All Auto Fire on All Button:

Press *FunctionB* button and *FunctionA*.